


Smart4Energy


Meter

Release Notes

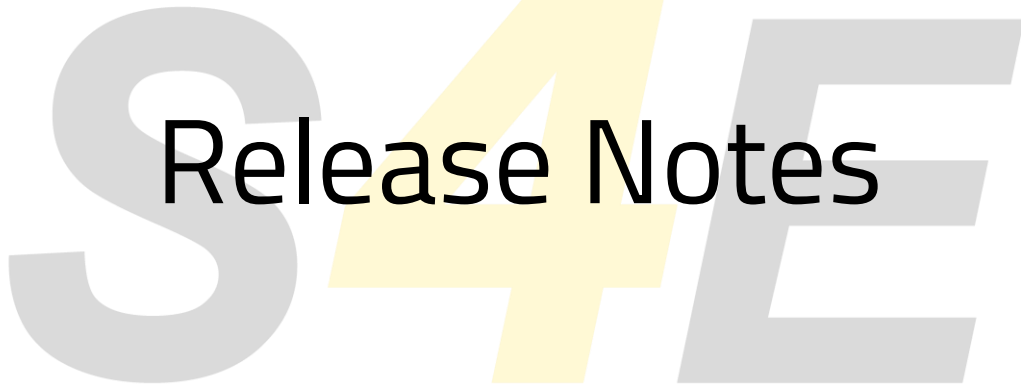

Inhalt

Meter FW V1.88 Customer Release notes (intern version 188)	3
Meter FW V1.87 Customer Release notes (intern version 187)	4
Meter FW V1.2 Customer Release notes (intern version 180)	5
Meter FW V1.1 Customer Release notes (intern version 175)	6
Meter FW V1.0 Customer Release notes (intern version 165)	7
Notizen	8

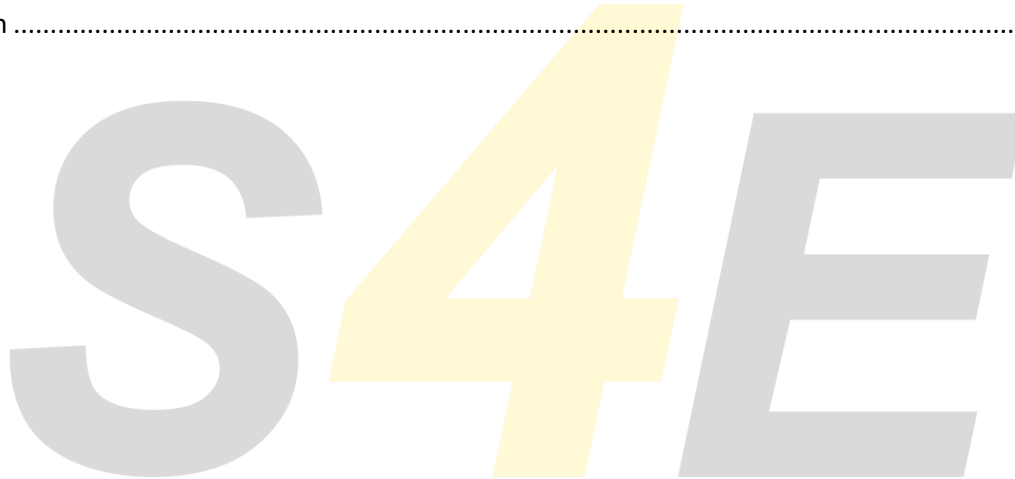

Meter FW V1.88 Customer Release notes (intern version 188)

- Some bugfixes



Meter FW V1.87 Customer Release notes (intern version 187)

- Some bugfixes
- Automatic restart function every 24h. Can be activated with monitor or datenlogger



Meter FW V1.2 Customer Release notes (intern version 180)

- Meter firmwareupdate over air in combination with monitor or datenlogger
- Meter labeling for the 20 input channels over air in combination with monitor or datenlogger
- Meter restartfunction over air in combination with monitor or datenlogger



Meter FW V1.1 Customer Release notes (intern version 175)

- New coil ratios for 20 metering channels
- The meter restarts automaticly if the communicatin to monitor is lost.
Working for canbus and modbus.



Meter FW V1.0 Customer Release notes (intern version 165)

- Improved Analog channels measurement accuracy
- Default coil values and channel names will be set automatically according to device type after factory reset
- Integrated the possibility to set the channel binding to Automatic without doing a factory reset
- Added user pop-up help message before factory reset
- Improved the user experience in interaction with the menu:
 - Introduced the long press feature with the direction keys on the menu
 - Set the default system language to German
 - Added a cancel button on the keyboard to abort the ongoing operation
 - Fixed the display contrast issue with of the old versions
- Introduced new entries to the analog channel and phases menus:
 - Added the current, apparent power and power factor entries to the analog channels menus.
 - Added the current measurement of the 3 phases and the neutral in the Building main cable menu

